


alsap DRIVE-RITE Firestone

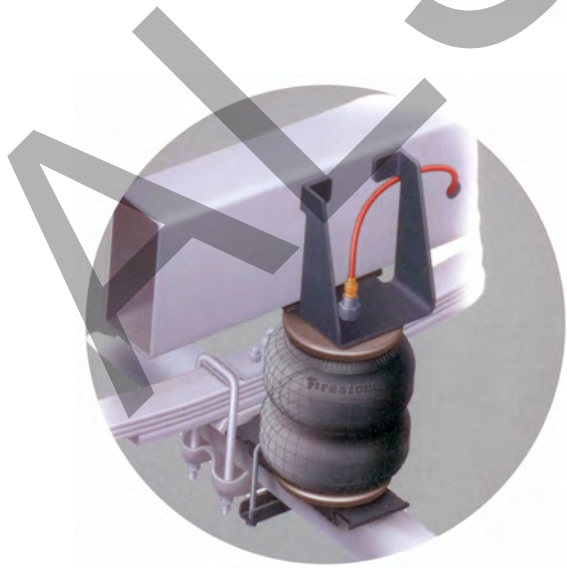


www.alsap.cz

ALSAP s.r.o. , Pražská 179, 267 12 Loděnice u Berouna
Tel. 733 746 997, 733 746 999, prodej@alsap.cz

Full Air Suspension – plné vzduchové pružení

Full Air Suspension—plné vzduchové pružení. Při použití se odstraní stávající pružiny a nahradí se vzduchovým měchem a potřebnými držáky dle typu vozidla. Full Air Suspension—plné vzduchové pružení je montováno včetně kompresoru, výškových senzorů s napojenými řídicí jednotkou a kompletním spojovacím materiálem.

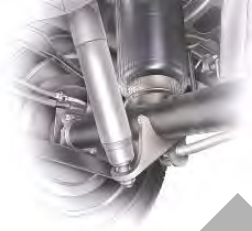

Funkce systému:

- Full Air Suspension – plné vzduchové pružení je k dispozici ve dvou verzích. **Standardní verze** je použita pro komerční využití, poskytuje podporu zatížení, stabilitu a lepší jízdní vlastnosti. Toto nastavení je vhodné pro odtaňová vozidla, těžké náklady, atd.
- **Comfort verze** poskytuje měkké a jemné pružení pro dokonalé pohodlí. Frekvence pružení je velmi nízká, okolo 0,9 Hertz a je vhodný zejména pro Ambulance, Taxis a přepravu invalidů. Systém může být vybaven ovládním na zvýšení a snížení vozidla v zadní části, které usnadňuje nakládání a nastupování.


Možnosti:

- Snížení zařízení: ovládní může být namontováno uvnitř vozidla nebo v zadní části u dveří. Při snížení se vypustí vzduchové měchy až na dorazy – nejnižší poloha.
- Speciální Anti-Roll Bar: Určeno pro vozidla s vysokým těžištěm (karavany), kde zlepšuje jízdní vlastnosti.
- Mechanická regulace výšky je možnost místo ECAS funkce.

Schválení:

The Full Air Suspension – plné vzduchové pružení je schváleno podle EEC se souhlasem výrobce podvozků.

Použití na:

- ambulance přeprava invalidů
-  minibusy
- karavany
- vysoké zatížení
- pojízdných prodejen dílen
- Speciální vozidla



Semi Air - přídatné vzduchové pružení

Semi Air - přídatné vzduchové pružení může být instalován na většině užitkových vozidel, tj. nákladní automobily, obytné automobily - karavany, 4WDs, minibusy a dodávky. Vzduchové pérování je umístěno mezi rámem vozidla a nápravou vozidla odpruženou pružinami, s využitím tlumení vzduchovým měchem.

Vzduchové měchy a systém odpružení vyrábí světová jednička ve vzduchovém pružení fa. Firestone, která se zavázala poskytnout zákazníkovi co nejlepší vzduchové sestavy přídatného pružení.

Semi Air - přídatné vzduchové pružení využívá pár spletých nebo zúžený typ vzduchových měchů. Tyto měchy mají kapacitu* 2500kg v každé sadě. Je nesmírně důležité si uvědomit, že pomocné vzduchové pružení nezvyšuje nosnost vozidla.

Ačkoli vzduchové pružiny jsou schopné zvedání velké váhy jsou určeny k maximalizaci zatížení vozidla v rámci celkové hmotnosti.

Nepřekračujte doporučenou Celkovou hmotnost.



Semi Air - přídatné vzduchové pružení:

1. Udrží vozidlo přední část dolů – zlepšit řízení, seřízení světel a sníží opotřebení pneumatik.
2. Při použití řídicího ventilu je možno (u 4 měchů) vyrovnávat vozidlo do stran a vyrovnání dopředu a dozadu.
3. Snížení unavení listových pružin při konstantním zatížení.
4. Vzduchové měchy zlepšují jízdu s odpovídajícím zatížením s možností regulace 0,5 bar až 7 Bar.
5. Vzduchový měch nahrazuje dorazy a změkčuje nárazy rámu do nápravy.
6. Zvýšení stability vozu - pohlcující silniční nerovnosti, poskytuje ideální podmínky pro jízdu cestujících a nákladu, stabilizuje vozidla při naloženém stavu.
7. Maximalizuje nosnost vozidla.

Základní sada

- Sada je kompletní pro rychlou montáž na vozidlo. Držáky, vzduchové měchy, spojovací materiál, rychlospojky, ventily, vzduchové hadice. Průměrná doba instalace je přibližně 2 až 4 hodiny (při montáži kompresoru a měření).

Obsah soupravy:

- vzduchové měchy
- vzduchové hadice
- spojovací materiál
- podrobné instrukce
- doraz (pokud je vyžadováno)
- ventily
- Push-to-Connect vzduchové spojky



Standardy kvality při výstupní kontrole:

- Každý vzduchový měch je nahuštěn na 11 Bar před opuštěním továrny
- Testováno na více než 1 milion cyklů
- Každá sada se zváží, aby počet komponentů odpovídal balení.
- Certifikáty ISO

Použití na:

- Pick-up
- Karavany
- Třída A, B, C
- Dodávky
- Podvozky, skříně, valníky
- SUV
- Speciální přepravníky
- Vozidla s pracovní plošinou
- Přeprava skla, zvířat, dílny

Coil-Rite[®] , vzduchové pomocné pružení

Vzduchový vak namontovaný uvnitř stávající vinuté pružiny. Tyto vzduchové pružiny umožňují nastavitelné pružení s větším komfortem a s možností ovládnutí zdvihu a pružení, odolné polyuretanové měchy bude podporovat *230- 450 kg na sadu.

Objevte rozdíl s Coil-Rite[®] , vzduchové pomocné pružení zlepší jízdní vlastnosti, řízení a brzdění vašeho vozidla.

Coil-Rite[®] , vzduchové pomocné pružení—podporuje pružení u vinutých pružin u osobních vozidel, minivanů, dodávek, lehkých nákladních vozů, RV a SUV, Použití Coil-Rite[®] , vzduchové pomocné pružení dává vašemu vozidlu plynulejší jízdní vlastnosti, účinnější brzdění a manipulaci, dokonce i za velké zátěže, nepříznivých silničních podmínek nebo na nerovném terénu.

Coil-Rite[®] , vzduchové pomocné pružení jsou vyrobeny z odolného polyuretanu tak, aby odolalo vinuté pružině v závěsu.

Coil-Rite[®] , vzduchové pomocné pružení:

1. Zvýšení stability vozu
2. Zlepšit řízení a vyvážení
3. Zlepšení brzdného účinku
4. Zabránit tvrdým dorazům
5. Vyrovnává vozidlo
6. Udržuje správně seřazené světlometry
7. Snížení opotřebení pneumatik
8. Podpora 500 - 1000 kg

Standarty kvality

- 1,35 Bar zkouška těsnosti na každé vzduchové pružině
- Tahové zkoušky začátku každého nastavení
- Testováno na více než 1 / 2 milion cyklů

Základní sada

- Sada je kompletní pro rychlou montáž na vozidlo. Držáky, vzduchové měchy, spojovací materiál, rychlospojky, ventily, vzduchové hadice. Průměrná doba instalace je přibližně 1 až 2 hodiny.

Obsah soupravy:

- vzduchové měchy
- vzduchové hadice
- spojovací materiál
- podrobné instrukce
- doraz (pokud je vyžadováno)
- ventily
- Push-to-Connect vzduchové spojky



Použití na:

- Pick-up (přední)
- Kempinkové vozidla (přední)
- SUV
- Auta






Semi Air Kit

Coil Rite Kit

Full Air Kit

LSV Kit

model	Rok výroby	Poznámka	Přední Kit	Typ měchu	Zadní Kit	Typ měchu
Audi						
A6	98-07	Coil Rite Kit			4105	6013
Chrysler						
PT Cruiser	01-09	Coil Rite Kit			4139	6015
Citroen						
Berlingo C4 <i>NEW</i>	 08-09	Full Air Kit - Electronic Height Control - With Lowering			3168	9000
Dispatch - Jumpy	96-06	Coil Rite Kit			4143	6016
Dispatch - G9	07-09	Coil Rite Kit			4264	6016
Dispatch - G9	 07-09	Full Air Kit - Electronic Height Control - With Lowering			3496	9931
C25 - Euro Chassis 280/290	88-93	For All Applications			2112	6781
C25 - Euro Chassis 280/290	88-93	Kit For vehicles with a Load Sensing LSV Valve			3003	3000
C25 - Euro Chassis 280/290	88-93	314LSV Kit For vehicles with a Load Sensing Valve (Motorhomes)			3149	
Jumper / Relay - Euro Chassis X230	94-01	For All Applications			2110	6781
Jumper / Relay - Euro Chassis X230	94-01	LSV Kit For vehicles with a Load Sensing Valve			3003	3000
Jumper / Relay - Euro Chassis X230	94-01	LSV Kit For vehicles with a Load Sensing Valve (Motorhomes)			3149	
Jumper / Relay - Euro Chassis X244	02-06	For All Applications			2110	6781
Jumper / Relay - Euro Chassis X244	02-06	LSV Kit For vehicles with a Load Sensing Valve			3178	
Jumper/ Relay - Euro Chassis X250	06-09	Standard kit to suit all applications-ABS Vehicles Only			2428	6781
Jumper / Relay - Euro Chassis X250	06-09	Kit with larger Air Springs for extra volume and comfort-ABS Vehicles Only			2429	7339
Jumper/ Relay - Euro Chassis X250	06-09	Full Air Improvement Kit			3202	9934
Diahatsu						
Rocky	00-07	Coil Rite Kit			4580	4580
Fiat						
Scudo	96-06	Coil Rite Kit			4143	6016
Scudo - G9	07-09	Coil Rite Kit			4264	6016
Scudo -G9	 07-09	Full Air Kit - Electronic Height Control - With Lowering			3496	9931
Doblo Cargo	03-08	No Anti-Roll Bar			2114	6781
Doblo Panorama	03-08	With Anti-Roll Bar (Passenger Vehicle Only)			2117	7073
Ducato - Euro Chassis 280/290	88-93	For All Applications			2112	6781
Ducato - Euro Chassis 280/290	88-93	LSV Kit For vehicles with a Load Sensing Valve			3003	3000
Ducato - Euro Chassis 280/290	88-93	LSV Kit For vehicles with a Load Sensing Valve (Motorhomes)			3149	
Ducato - Euro Chassis X230	94-01	For All Applications			2110	6781
Ducato - Euro Chassis X230	94-01	LSV Kit For vehicles with a Load Sensing Valve			3003	3000
Ducato - Euro Chassis X230	94-01	LSV Kit For vehicles with a Load Sensing Valve (Motorhomes)			3149	
Ducato - Euro Chassis X244	02-06	For All Applications			2110	6781
Ducato - Euro Chassis X244	02-06	LSV Kit For vehicles with a Load Sensing Valve			3178	
Ducato - Euro Chassis X250	06-09	Standard kit to suit all applications -ABS Vehicles Only			2428	6781
Ducato - Euro Chassis X250	06-09	Kit with larger Air Springs for extra volume and comfort-ABS Vehicles Only			2429	7339
Ducato - Euro Chassis X250	06-09	Full Air Improvement Kit			3202	9934
Ford						
Ranger	00-09	4x4-For Vehicles Fitted with ABS			3454	6781
Transit 100/120	89-99	Transit Square Axle without Anti Roll Bar			2123	0335
Transit 130/160/190	89-99	Transit Round Axle without Anti Roll Bar			3001	0335
Transit LSV 100/120/130/160/190	89-99	All Models 100/120/130/160/190			3000	9019
Transit	00-03	Transit Square Axle Single Rear Wheel - ABS Vehicles only			3450	6781
Transit	00-03	Transit Round Axle Single Rear Wheel - ABS Vehicles only			3451	6781
Transit	00-09	Transit Round Axle Dual Rear Wheel - ABS Vehicles only			3448	6781
Transit	04-09	Front Wheel Drive / Square Rear Axle (Type 330-350)-ABS Vehicles Only			3446	6397
Transit	04-09	Front Wheel Drive / Square Rear Axle (Type 260-300)-ABS Vehicles Only			3449	6397
Transit FT350	04-09	Rear Wheel Drive / Round Rear Axle-ABS Vehicles Only			3447	6397

www.alsap.cz

ALSAP s.r.o. , Pražská 179, 267 12 Loděnice u Berouna
Tel. 733 746 997, 733 746 999, prodej@alsap.cz

model	Rok výroby	Poznámka	Přední Kit	Typ měchu	Zadní Kit	Typ měchu
Honda Vans						
Odyssey	02-09	Coil Rite Kit			4179	6020
Odyssey		Coil Rite Kit			4138	6017
Odyssey	96-98	Coil Rite Kit			4133	6018
Honda SUVs						
Passport	98-02	4x2, 4x4			4136	6014
Pilot	05-09				4179	6020
Pilot	01-04				4138	6017
Hummer SUVs						
H3 <i>NEW</i>	06-09				2460	6781
H2, H2 SUT (With Rear Coil Springs)	03-09	Coil Rite Kit			4108	6003
Hyundai Cars						
Accent	07-09	Coil Rite Kit			4136	6014
Hyundai SUVs						
Santa-Fe	07-09	Coil Rite Kit			4170	6017
Santa-Fe	01-06	Coil Rite Kit			4167	6027
Veracruz	07-09	Hummer SUVs			4170	6017
Hyundai Vans						
Entourage	07-08	Coil Rite Kit			4138	6017
Isuzu						
Oasis	96-98	Coil Rite Kit			4133	6018
Amigo	98-00	Coil Rite Kit			4103	6014
Axiom	02-03	Coil Rite Kit			4136	6014
Rodeo, Rodeo Sport	98-04	Coil Rite Kit			4136	6014
Trooper	98-02	4x4 Leaf Spring vehicle with ABS			3460	6781
Trooper	98-04	Coil Rite Kit			4143	6016
Trooper	92-97	Coil Rite Kit			4106	6015
D-MAX / Rodeo	03-09	4x4 Leaf Spring vehicle with ABS			3460	6781
NPR <i>NEW</i>	96-09	Front Axle Kit	2440	6868		
NQR <i>NEW</i>	96-09	For vehicles with ABS			3407	5310
NQR <i>NEW</i>	96-09	LSV kit for vehicles with a Load Sensing Valve			3411	
Iveco						
Daily 35-10, 35-12, 45-10, 45-12	90-99	Light Duty Application			2089	6781
Daily 35-10, 35-12, 45-10, 45-12	90-99	LSV kit for vehicles with a Load Sensing Valve			3082	3000
Daily 35-10 to 49-12	90-99	All Applications-Twin Rear Wheel (With ABS) - 4 Bag System			3455	9000
Daily 35C-11 to 35C-13	00-06	Twin Rear Wheel (With ABS) - 4 Bag System			3456	9000
Daily 35C to 50C	06-09	Twin Rear Wheel (With ABS)			3410	0335
Daily 40C-13, 50C-13	00-06	Twin Rear Wheel (With ABS) - 4 Bag System			3456	9000
Daily 35S-L 11 To 17	00-06	Single rear wheel (Leaf Below Axle)			3438	6784
Daily 29-35 S-L 11 To 18	00-09	Single rear wheel (Leaf Above Axle)			3439	6397
Jeep						
Commander	06-09	4x2 / 4x4			4157	6005
Grand Cherokee	05-09	4x2 / 4x4			4157	6005
Grand Cherokee	92-98	4x2 / 4x4			4118	6018
Grand Wagoneer	92-98	4x2 / 4x4			4118	6018
Liberty	02-08	4x2 / 4x4			4146	6005
Summit	92-93	Coil Rite Kit			4105	6013
Wrangler X	07-09	4x2 / 4x4			4173	6006
Wrangler Sahara	07-09	4x2 / 4x4			4173	6006
Wrangler Rubicon	07-09	4x4 Only			4172	6007
Wrangler Unlimited X	07-09	4x2 / 4x4			4173	6006
Wrangler Unlimited Sahara	07-09	4x2 / 4x4			4173	6006
Wrangler Unlimited Rubicon	07-09	4x4 Only			4172	6007
Wrangler	97-06	4x2 / 4x4			4157	6005
Kia Vans						
Sodona	06-08	Coil Rite Kit			4138	6017

Semi Air Kit

Coil Rite Kit

Full Air Kit

LSV Kit

model	Rok výroby	Poznámka	Přední Kit	Typ měchu	Zadní Kit	Typ měchu
Kia SUVs						
Sorento	03-08	Coil Rite Kit			4153	6024
Land Rover						
Defender 90	90-97	Coil Rite Kit			4121	6003
Defender 110	83-09	Coil Rite Kit			4510	6010
Discovery	90-04	Coil Rite Kit			4121	6003
Range Rover	90-96	Coil Rite Kit			4121	6003
Range Rover 93MY, HSE 97MY	95-09	OEM-Original Landrover Suspension- Replacement Bags	OEM	0200	OEM	0027
Lexus						
LX 450	96-98	Coil Rite Kit			4124	6007
LX 470	99-09	Coil Rite Kit			4124	6007
Mazda						
626	79-82				4591	6591
Mazda5	06-09				4168	6027
Mazda6	06-09				4168	6027
MPV	05-06	Coil Rite Kit			4140	6018
MPV Van	96-98	Coil Rite Kit			4105	6013
B2500/ BT-50	00-09	4x4-For Vehicles Fitted with ABS			3454	6781
Pickup	72-90	4x2			1130	0335
Mercedes						
Vito	96-03	Front Wheel Drive Vehicle			4145	6028
Vito	03-09	Rear Wheel Drive Vehicle			4261	6016
Vito	03-09	Full Air Kit - Rear Axle Kit only c/w shock absorbers			3489	9041
Vito	03-09	Full Air Kit - Electronic Height Control - With Lowering			3487	9041
3 Series Sprinter - 207 - 310	88-96	For All Applications			3004	6781
3 Series Sprinter - 308,310,312,313,316	96-06	Chassis Cab / Motorhome Application			3114	9000
3 Series Sprinter - 308,310,312,313,316	96-06	All Applications			2312	9002
Sprinter 209, 211, 213, 215	06-09	ABS Vehicles Only			3500	6397
Sprinter 309, 311, 313, 315, 318, 324	06-09	ABS Vehicles Only/Excluding extra long wheel base model			3500	6397
Sprinter 309, 311, 313, 315, 318, 324 NEW	06-09	ABS Vehicles Only/All Applications			3502	6781
4 Series Sprinter - 408, 410, 412, 413, 416	96-06	Chassis Cab Version (using 70mm sleeve airsprings)			3119	7095
4 Series Sprinter - 408, 410, 412, 413, 416	96-06	Chassis Cab Version (using double convolute airsprings)			2382	6397
4 Series Sprinter - 408, 410, 412, 413, 416	96-06	Van Version (using 70mm sleeve airsprings)			3461	7095
4 Series Sprinter - 408, 410, 412, 413, 416	96-06	Van Version (using double convolute airsprings)			2425	6397
Sprinter 509, 511, 515, 518, 524	06-09	ABS Vehicles Only			3501	0335
Sprinter 509, 511, 515, 518, 524	06-09	Kit with larger Air Springs for extra volume and comfort (ABS Vehicles Only)			4000	7339
6 Series Sprinter - 616	96-09	4-Bag System			3466	6781
Mitsubishi						
Expo	92-93	Coil Rite Kit			4105	6013
Montero Sport	99-04	Coil Rite Kit			4137	6007
Pajero / Shogun	93-03	Coil Rite Kit			4113	6007
Pajero	04-09	Coil Rite Kit			4247	6014
Pickup	69-96	4x2			1130	0335
L200	90-05	4x4-For Vehicles Fitted with ABS			3457	6781
L200 / Triton / Warrior	06-09	4x4-For Vehicles Fitted with ABS			3469	6781
Nissan Cars						
Altima	05-09	Coil Rite Kit			4105	6013
Maxima	05-08	Coil Rite Kit			4105	6013
Nissan Vans						
Kubistar NEW	08-09	Full Air Kit - Electronic Height Control - With Lowering			3167	9000
Quest	04-08	Coil Rite Kit			4118	6018
Primastar X83	01-09	Coil Rite Kit			4250	6021
Primastar X83	01-09	Full Air Kit - Rear Axle Kit only c/w shock absorbers			3465	9041
Primastar X83	01-09	Full Air Kit - Electronic Height Control - No Lowering			3244	9041
Primastar X83	01-09	Full Air Kit - Electronic Height Control - With Lowering			3166	9041
Primastar X83	01-09	LSV Kit For Non-ABS Vehicles			3334	

www.alsap.cz

ALSAP s.r.o. , Pražská 179, 267 12 Loděnice u Berouna
Tel. 733 746 997, 733 746 999, prodej@alsap.cz

model	Rok výroby	Poznámka	Přední Kit	Typ měchu	Zadní Kit	Typ měchu
Nissan Vans (Cont.)						
Interstar X70	98-09	Semi Air Heavy Duty Kit	4117	6004	3123	6784
Interstar X70	98-09	Complete with Automatic Height Control	4117	6004	3121	9000
Interstar X70	98-09	Rear Axle Only - Tapered Sleeve Kit	4117	6004	3126	9000
Interstar X70	98-09	LSV Kit For Non-ABS Vehicles			3148	
Interstar X70	98-09	Full Air Kit - Front Axle	3382	2119		
Interstar X70	98-09	Full Air Improvement Comfort Kit	4117	6004	3141	9931
Interstar X62 NEW	2009	ABS Vehicles Only			3120	6781
Atleon LP2 35.15-35HD.15-56.15	06-09				3406	6784
Atleon LG1 70.14-80.14-80.19	06-09	Auto Levelling kit			3371	6183
Atleon LG1 70.14-80.14-80.19	06-09	Manual Inflation Kit			3372	6183
Atleon LG1 70.14-80.14-80.19	06-09	Compressor and Dual Gauge Kit			3373	6183
Atleon LG1 70.14-80.14-80.19	06-09	Compressor and Single Gauge Kit			3374	6183
Cabstar	06-09				3127	6784
Trade	03-06	All Applications			3474	0335
Nissan SUVs						
Armada	06-09	4x2 / 4x4			4150	6023
Murano	2009	4x2 / 4x4			4118	6018
Murano	03-08	4x2 / 4x4			4181	6024
Pathfinder Armada	04-05	4x2 / 4x4			4150	6023
Pathfinder	87-95	4x2 / 4x4			4106	6015
Pathfinder	06-08	4x2 / 4x4			4166	6021
Patrol	88-94	Leaf Spring 4x2			1130	0335
Patrol	93-09	Coil Rite Kit			4570	6010
Rogue	08-09	4x2 / 4x4			4181	6024
Xterra	05-09	4x2 / 4x4			2409	9002
Nissan Pickup Trucks						
Frontier	01-04	4x2			2293	9002
Frontier	05-08	4x2/4x4			2403	6766
Pickup	69-96	4x2			1130	0335
Titan	04-08	4x2, 4x4			2355	6781
D21, D22, Navara	98-04	4x4-For Vehicles Fitted with ABS			3458	6781
D40, Navara	05-09	4x4-For Vehicles Fitted with ABS			2413	6397
Opel						
Campo	88-09	4x4 Campo - Fitted with ABS			3460	6781
Vivaro X83	01-09	Coil Rite Kit			4250	6021
Vivaro X83	01-09	Full Air Kit - Rear Axle Kit only c/w shock absorbers			3465	9041
Vivaro X83	01-09	Full Air Kit - Electronic Height Control - No Lowering			3244	9041
Vivaro X83	01-09	Full Air Kit - Electronic Height Control - With Lowering			3166	9041
Vivaro X83	01-09	LSV Kit For Non-ABS Vehicles			3334	
Movano X70	98-09	Semi Air Heavy Duty Kit	4117	6004	3123	6784
Movano X70	98-09	Complete with Automatic Height Control	4117	6004	3121	9000
Movano X70	98-09	Rear Axle Only - Tapered Sleeve Kit	4117	6004	3126	9000
Movano X70	98-09	LSV Kit For Non-ABS Vehicles			3148	
Movano X70	98-09	Full Air Kit - Front Axle	3382	2119		
Movano X70	98-09	Full Air Improvement Comfort Kit	4117	6004	3141	9931
Movano X62 NEW	2009	ABS Vehicles Only			3120	6781
Peugeot						
307	04-09	Coil Rite Kit			4158	6262
Expert	96-06	Coil Rite Kit			4143	6016
Expert - G9	07-09	Coil Rite Kit			4264	6016
Expert - G9	07-09	Full Air Kit - Electronic Height Control - With Lowering			3496	9931
Partner NEW	08-09	Full Air Kit - Electronic Height Control - With Lowering			3168	9000
J5 - Euro Chassis 280/290	88-93	For All Applications			2112	6781
J5 - Euro Chassis 280/290	88-93	LSV Kit For Non-ABS Vehicles			3003	3000
J5 - Euro Chassis 280/290	88-93	LSV Linkage For Non-ABS Vehicles (Motorhomes)			3149	

Semi Air Kit

Coil Rite Kit

Full Air Kit

LSV Kit


model	Rok výroby	Poznámka	Přední Kit	Typ měchu	Zadní Kit	Typ měchu
Peugeot (Cont.)						
Boxer - Euro Chassis X230	94-01	Commercial Vehicle Application			2110	6781
Boxer - Euro Chassis X230	94-01	LSV Kit For Non-ABS Vehicles			3003	3000
Boxer - Euro Chassis X230	94-01	LSV Linkage For Non-ABS Vehicles (Motorhomes)			3149	
Boxer - Euro Chassis X244	02-06	Commercial Vehicle Application			2110	6781
Boxer - Euro Chassis X244	02-06	LSV Kit For Non-ABS Vehicles			3178	
Boxer - Euro Chassis X250	06-09	Standard kit to suit all applications-ABS Vehicles Only			2428	6781
Boxer - Euro Chassis X250	06-09	Kit with larger Air Springs for extra volume and comfort-ABS Vehicles Only			2429	7339
Boxer - Euro Chassis X250	06-09	Full Air Improvement Kit			3202	9934
Renault						
Espace	00-02	Coil Rite Kit			4251	6017
Espace	03-09	Coil Rite Kit			4250	6021
Espace	03-09	Full Air Kit - Rear Axle Kit only c/w shock absorbers			3172	9931
Espace	03-09	Full Air Kit - Electronic Height Control - With Lowering			3490	9931
Kangoo X61 <i>NEW</i>	08-09	Full Air Kit - Electronic Height Control - With Lowering			3167	9000
Laguna II	02-03	Coil Rite Kit			4106	6015
Trafic X83	01-09	Coil Rite Kit			4250	6021
Trafic X83	01-09	Full Air Kit - Rear Axle Kit only c/w shock absorbers			3465	9041
Trafic X83	01-09	Full Air Kit - Electronic Height Control - No Lowering			3244	9041
Trafic X83	01-09	Full Air Kit - Electronic Height Control - With Lowering			3166	9041
Trafic X83	01-09	LSV Kit For Non-ABS Vehicles			3334	
Mascot	05-09				3125	6784
Master X70	98-09	Semi Air Heavy Duty Kit	4117	6004	3123	6784
Master X70	98-09	Complete with Automatic Height Control	4117	6004	3121	9000
Master X70	98-09	Rear Axle Only - Tapered Sleeve Kit	4117	6004	3126	9000
Master X70	98-09	LSV Kit For Non-ABS Vehicles			3148	
Master X70	98-09	Full Air Kit - Front Axle	3382	2119		
Master X70	98-09	Full Air Improvement Comfort Kit	4117	6004	3141	9931
Master X62 <i>NEW</i>	2009	ABS Vehicles Only			3120	6781
Maxity	07-09				3127	6784
Ssangyong SUVs						
Rexton/Actyon	02-09	Coil Rite Kit			4103	6014
Musso Sport	04-06	Coil Rite Kit			4240	6015
Musso Wagon	92-06	Coil Rite Kit			4241	6024
Suzuki						
Vitara	90-00	Coil Rite Kit			4620	3624
Jimny	06-09	Coil Rite Kit	4515	4515	4516	4516
Sidekick	89-93	Coil Rite Kit			4620	3624
Toyota Cars						
ECHO	01-05	Coil Rite Kit			4118	6018
Yaris	07-09	Coil Rite Kit			4136	6014
Toyota						
Dyna 150	02-09	Dual Rear Wheel Only			3128	0335
Siena	04-09	Coil Rite Kit			4155	6020
Siena	98-03	Coil Rite Kit			4118	6018
RAV4	07-09	Coil Rite Kit			4174	6028
RAV4	96-98	Coil Rite Kit			4104	6012
FJ Cruiser	07-08	Coil Rite Kit			4135	6024
4-Runner	90-95	Coil Rite Kit			4112	6006
4-Runner	96-97	Coil Rite Kit			4123	6021
4-Runner	98-08	Coil Rite Kit			4135	6024
Sequoia	2008	Coil Rite Kit			4164	6009
Sequoia	01-07	Coil Rite Kit			4124	6007
Landcruiser	91-09	Coil Rite Kit (European Model)			4124	6007
Landcruiser (100 Series)	98-07	Coil Rite Kit			4114	6008
Landcruiser (200 Series)	07-09	Coil Rite Kit			4129	6010
Landcruiser	88-96	Leaf Spring Vehicle - BJ75 Pick-up			1130	0335
Hiace	99-02	Coil Rite Kit			4500	3600
Hiace	03-09	Coil Rite Kit			4138	6017
Hilux	88-05	4 x 4 N16 / N17 - For Vehicles Fitted With ABS			3459	6781
Hilux / Vigo	06-09	4 x 4			3475	0335

www.alsap.cz

ALSAP s.r.o. , Pražská 179, 267 12 Loděnice u Berouna
Tel. 733 746 997, 733 746 999, prodej@alsap.cz

model	Rok výroby	Poznámka	Přední Kit	Typ měchu	Zadní Kit	Typ měchu
Toyota (Cont.)						
Hilux / Vigo	06-09	LSV Kit			3452	3008
Pickup	69-95	4x2			1130	0335
Pickup	84-95	4x4			2116	6781
T 100	93-98	4x2			2115	6781
T 100	93-98	4x4			2116	6781
Tacoma	95-04	4x2			2213	6959
Tacoma TRD Prerunner	05-09	4x2 only			2407	6781
Tacoma	05-09	4x2			2410	6959
Tacoma	95-04	4x4			2304	6781
Tacoma Prerunner	05-09	4x2 only			2407	6781
Tacoma Prerunner	95-04	4x2 only			2304	6781
Tundra	07-09	4x2, 4x4			2445	6397
Tundra	00-06	4x2			2212	9001
Tundra	00-06	4x4			2245	6781
Tundra	00-06	4x4 (TRD) 4x2			2245	6781
Van with rear Coils	64-89	Coil Rite Kit			4112	6006
Vauxhall						
Vivaro X83	01-09	For Use with Original Coil			4250	6021
Vivaro X83	01-09	Full Air Kit - Rear Axle Kit only c/w shock absorbers			3465	9041
Vivaro X83	01-09	Full Air Kit - Electronic Height Control - No Lowering			3244	9041
Vivaro X83	01-09	Full Air Kit - Electronic Height Control - With Lowering			3166	9041
Vivaro X83	01-09	LSV Kit For Non-ABS Vehicles			3334	
Movano X70	98-09	Semi Air Heavy Duty Kit	4117	6004	3123	6784
Movano X70	98-09	Complete with Automatic Height Control	4117	6004	3121	9000
Movano X70	98-09	Rear Axle Only - Tapered Sleeve Kit	4117	6004	3126	9000
Movano X70	98-09	LSV Kit For Non-ABS Vehicles			3148	
Movano X70	98-09	Full Air Kit - Front Axle	3382	2119		
Movano X62 NEW	2009	ABS Vehicles Only			3120	6781
Volkswagen Cars						
Eos	07-09	Coil Rite Kit			4176	6027
GTI	07-09	Coil Rite Kit			4176	6027
Jetta	07-09	Coil Rite Kit			4175	6026
Jetta Sport Wagon	2009	Coil Rite Kit			4176	6027
Passat (Not TDI)	98-06	Coil Rite Kit			4104	6012
Passat Wagon	07-09	Coil Rite Kit			4175	6026
Volkswagen Vans						
Caddy NEW	05-09	ABS Vehicles only			3503	6781
Caddy Pickup (Skoda)	98-09	Coil Rite Kit			4144	6026
Taro (4x4)	88-04	N16 / N17 - For Vehicles fitted with ABS			3459	6781
Euro Van, T-4	85-03	Coil Rite Kit			4117	6004
Euro Van, T-4	85-03	Full Air Kit - Rear Axle Kit only			3022	6988
T5 Van / Bus	04-09	Full Air Kit - Rear Axle Kit only			3482	6988
T5 Van / Bus	04-09	Full Air Kit - Rear Axle Kit only c/w shock absorbers			3498	6988
T5 Van / Bus	04-09	Full Air Kit - Electronic Height Control - With Lowering			3483	6988
T5 Chassis Cab	04-09	Full Air Kit - Rear Axle Kit only			3481	6988
T5 Chassis Cab	04-09	Full Air Kit - Rear Axle Kit only c/w shock absorbers			3499	6988
T5 Chassis Cab	04-09	Full Air Kit - Electronic Height Control - With Lowering			3484	6988
T5 Van / Bus	04-09	Full Air Kit - Front Axle - 2.8 Tonne Vehicle - 1540 Kg Front Axle Load	5506	6988		
T5 Van / Bus / Chassis	04-09	Full Air Kit - Front Axle - 3.2 Tonne Vehicle - 1710 Kg Front Axle Load	5507	6988		
3 Series LT	96-06	Chassis Cab / Motorhome Application			3114	9000
3 Series LT	96-06	All Applications			2312	9002
Crafter 28 - 35	06-09	ABS Vehicles Only/Excluding extra long wheel base model			3500	6397
Crafter 28 - 35 NEW	06-09	ABS Vehicles Only/All Applications			3502	6781
4 Series LT	96-06	Chassis Cab Version (using 70mm sleeve airsprings)			3119	7095
4 Series LT	96-06	Chassis Cab Version (using double convolute airsprings)			2382	6397
4 Series LT	96-06	Van Version (using 70mm sleeve airsprings)			3461	7095
4 Series LT	96-06	Van Version (using double convolute airsprings)			2425	6397
Crafter 50	06-09	ABS Vehicles Only			3501	0335
Crafter 50	06-09	Kit with larger Air Springs for extra volume and comfort (ABS Vehicles Only)			4000	7339
Volvo						
140,160	66-74	Coil Rite Kit			4101	6002
240,260	75-85	Coil Rite Kit			4106	6015
850	90-01	Coil Rite Kit			4105	6013

Montáž přídatného vzduchového pružení

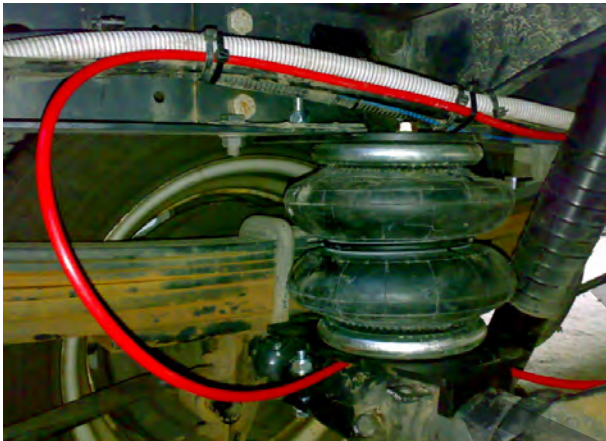

10 Vzduchové pérování

Kompresory



CO2236

Kompresor II se singl ovládním, jedno ovládní a měření současně

9 bar 15% času (6 min z 34 min - max 30 min)

5 kg, ks



CO2436

Kompresor s duálním ovládním, dvě ovládní a měření současně

9 bar 15% času (6 min z 34 min - max 30 min)

5 kg, ks